

## MPA 10-12

12V-10Ah - Cyclic AGM Battery

## **APPLICATIONS**



Powerchairs / home mobility equipment Scooters, 3— and 4 wheels Toys for children Lifts (stairs / bathrooms) Personal Carriers Utility Vehicles

SPECIFICA	TIONS		
Nominal Voltage			12V
Nominal capacity @20 hour rate			10Ah
Capacity at 25°C		10 hour rate	9,5Ah
		5 hour rate	8,5Ah
		1 hour rate	5,7Ah
Shelf time @20°C up to 70% in months		9	
Internal resistance (at 1 KHz)			approx. 11 m $\Omega$
Operating temperature for (dis)charge			-15°C to + 40°C

DIMENSIONS		
Dimensions LxWxH (T) in mm		151x65x112 (118)
Weight		3,3kg (±2%)
Separator		AGM, Glass Mat
Case and cover		ABS (UL94-V0 optional)
Terminal		Faston F2 (6,35mm)
Torque setting (recommended)		n.a.
Maximum allowable torque value		n.a.


CHARGING	#		
Charging Voltage cycle use 14,4 to 15 Volt			
Float charge Voltage 13,5 to 13,8 Volt			
Charging current, minimum 1A - maximum 1,5A			


## **CYCLE LIFE**



To maximize the cycle life of the battery, we recommend to charge the battery fully after use. The total life of the battery, is very dependant on the correct charge and depth of discharge per cycle.



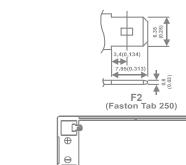

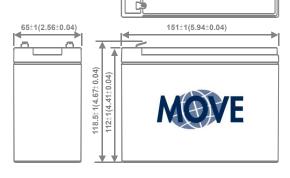

## **BATTERY LIFE UNDER CYCLIC USE**



Tested in conformance to the BCI testing method

100

DoD 75%

DoD 50%

LIFE IN CYCLES 200 300 400 500 600 700

\* Cycle life is measured with a discharge current 0,2C, charged 16h and rest capacity of 2/3 Cn

